

Ultraviolet & Ozone Sterilization Lamp

Quick Start Guide

Before operating this device please note:

- The light bulbs are fluorescent and are breakable. If broken please ventilate the room immediately (if possible) and/or exit the room/area for at least 10 minutes.
- The device should not be operated within the same room as humans, animals or plants.
- The remote is the only means of operation and is included with the A23 battery required.
- **Each remote is specific to the fixture it came with; please be sure to note the serial number on the remotes if purchasing multiple units.**
- When choosing a location to place the fixture to operate, keep in mind that whatever the light touches will be sterilized with the UV. If there are shadows on a surface, those surfaces will not be sterilized. For some applications this may require rotating an object for repeated exposures or utilizing multiple units in the same space for complete coverage. The air within the room that the UV light cannot reach will be sterilized by the ozone.

Device Operation

1. Place the fixture in a centralized location within the room.
2. Clear the room of humans (including yourself), animals and plants.
3. Press the “On” button on the remote.
4. Select the time setting desired on the remote.
5. Glance quickly at the light (from a distance) to ensure it is functioning properly. Do **NOT** look directly at the light.
6. Place a “Do Not Enter” sign with a time on all doors to the room stating when it will be safe to enter.
7. Open a window immediately upon entering and then exit the room again to allow it to ventilate for at least 30 minutes.
8. When you enter the room, you should be able to smell the ozone depending on how well the room is ventilated and how long after the cycle you waited before entering the room.

!! CAUTION !!

Prolonged exposure to UV light can damage the eyes and cause skin irritation. Prolonged exposure to Ozone can cause lung irritation. The only exposure you should experience is when you briefly look to ensure the lamp is powered on and when you enter the room AFTER the cycle has completed to ventilate the room. You should not be in the room while the light is in operation and for 30 minutes after operation.